

Print Server Compatibility List

Note:

- The Print Server supports both print sharing and scan sharing for the printers or MFPs(Multi-Function Printers) in the list below.
- You are recommended to upgrade your router to the latest version of firmware and utility(USB Printer Controller) to support more printers and for better user experience.
- The USB Printer Controller supports Windows 7 32bit/64bit, Vista 32bit/64bit, XP 32/64bit and Mac OS currently. Windows users can get the USB Printer Controller from the CD attached to the product or download from our website. Mac users can get it from our website only.

Last updated on May 7th, 2012

| Brand | Model | Brand | Model |
|---------|------------|-------|------------------|
| Ambir | DS485 | HP | LaserJet 9300 |
| Ambir | DS685 | HP | LaserJet III |
| Ambir | DS687 | HP | LaserJet M1319 |
| Ambir | PS465 | HP | LaserJet P1005 |
| Ambir | PS665 | HP | LaserJet P1006 |
| Avision | AV 220 | HP | LaserJet P1007 |
| Avision | AV 600U2 | HP | LaserJet P1008 |
| Avision | MF 3100L | HP | LaserJet P1505 |
| Avision | MF 3200 | HP | LaserJet P1505n |
| Avision | MF 3230 | HP | LaserJet P2010 |
| Avision | MF 6210 | HP | LaserJet P2014 |
| Avision | MF 6220 | HP | LaserJet P2015 |
| AURORA | AD-166 | HP | LaserJet P2015D |
| AURORA | AD-216 | HP | LaserJet P2030 |
| AURORA | AD-226 | HP | LaserJet P2035 |
| Brother | DCP-7060D | HP | LaserJet P2050 |
| Brother | MFC 2900 | HP | LaserJet P2055 |
| Brother | MFC 4800 | HP | LaserJet P2055d |
| Brother | MFC 4800J | HP | LaserJet P2055dn |
| Brother | MFC 6800 | HP | LaserJet P2055x |
| Brother | MFC 7000C | HP | LaserJet P3005 |
| Brother | MFC 7220 | HP | OfficeJet 4110 |
| Brother | MFC 8220 | HP | OfficeJet 4255 |
| Brother | MFC 8420 | HP | OfficeJet 4355 |
| Brother | MFC 8440 | HP | OfficeJet 5510 |
| Brother | MFC 8500 | HP | OfficeJet 5610 |
| Brother | MFC 8840DN | HP | OfficeJet 6110 |
| Brother | MFC 8860DN | HP | OfficeJet 510 |
| Brother | MW-140BT | HP | OfficeJet 710 |
| Brother | MFC 9010CN | HP | OfficeJet 6210 |
| Brother | DCP 7025 | HP | OfficeJet 6310 |
| Brother | DCP 7030 | HP | OfficeJet G85 |
| Brother | DCP 7040 | HP | OfficeJet J4580 |

| Brand | Model | Brand | Model |
|--------------|-----------------|--------------|---------------------|
| Brother | FAX-2820 | HP | OfficeJet J5780 |
| Brother | MFC 7010 | HP | OfficeJet J5788 |
| Brother | MFC-7340 | HP | OfficeJet K850 |
| Brother | MFC 7420 | HP | OfficeJet K8600 |
| Brother | MFC 7430 | HP | OfficeJet L7380 |
| Brother | MFC 8600 | HP | OfficeJet V40 |
| Brother | MFC-J220 | HP | OfficeJet L7580 |
| Brother | HL-2040 | HP | OfficeJet 4110 |
| Brother | HL-2140 | HP | OfficeJet 4355 |
| Canon | BJC-1000SP | HP | OfficeJet 5510 |
| Canon | BJC-2000SP | HP | OfficeJet 5608 |
| Canon | BJC-255SP | HP | OfficeJet 5610 |
| Canon | BJC-330 | HP | OfficeJet 6110 |
| Canon | BJC-400 | HP | OfficeJet 6210 |
| Canon | BJC-4100 | HP | OfficeJet 6310 |
| Canon | BJC-4300 | HP | OfficeJet Pro K5300 |
| Canon | BJC-4500 | HP | OfficeJet Pro K850 |
| Canon | BJC-4550 | HP | OfficeJet Pro K8600 |
| Canon | BJC-5000 | HP | Photosmart 130 |
| Canon | BJC-5100 | HP | Photosmart 148 |
| Canon | BJC-55 | HP | Photosmart 240 |
| Canon | BJC-5500 | HP | Photosmart 245 |
| Canon | BJC-5500T | HP | Photosmart 325 |
| Canon | BJC-600 | HP | Photosmart 375 |
| Canon | BJC-6000 | HP | Photosmart 1200 |
| Canon | BJC-610 | HP | Photosmart 2608 |
| Canon | BJC-620 | HP | Photosmart 2610 |
| Canon | BJC-6200 | HP | Photosmart 2710 |
| Canon | BJC-6500 | HP | Photosmart 3110 |
| Canon | BJC-700 | HP | Photosmart 7150 |
| Canon | BJC-8200 | HP | Photosmart 7155 |
| Canon | BJC-85 | HP | Photosmart 7260 |
| Canon | BJC-S6300 | HP | Photosmart 7268 |
| Canon | E-100 | HP | Photosmart 7550 |
| Canon | E-200 | HP | Photosmart 7660 |
| Canon | FaX L-350 | HP | Photosmart 7960 |
| Canon | I-850 | HP | Photosmart C3180 |
| Canon | I-950 | HP | Photosmart C3310 |
| Canon | iC MF3110 | HP | Photosmart C4180 |
| Canon | iC MF3200 | HP | Photosmart C4280 |
| Canon | iC MF4320 | HP | Photosmart C4385 |
| Canon | iC MF4350 | HP | Photosmart C4480 |
| Canon | iC MF4350D | HP | Photosmart C5180 |
| Canon | iC MF120 | HP | Photosmart C5280 |
| Canon | imageCLASS D383 | HP | Photosmart C7180 |
| Canon | IR 1600N | HP | Photosmart D5160 |
| Canon | IR 2318L | HP | Photosmart D5360 |

| Brand | Model | Brand | Model |
|--------------|--------------|--------------|--------------------------|
| Canon | LBP-810 | HP | Photosmart D5460 |
| Canon | LBP-1120 | HP | Photosmart Premium C309g |
| Canon | LBP-1210 | HP | Photosmart Premium C310a |
| Canon | LBP-1310 | HP | Photosmart Plus B210a |
| Canon | LBP-2000 | HP | PSC 750 |
| Canon | LBP-2050 | HP | PSC 950 |
| Canon | LBP-2300 | HP | PSC 1210 |
| Canon | LBP-2410 | HP | PSC 1218 |
| Canon | LBP-2710 | HP | PSC 1315 |
| Canon | LBP-2900 | HP | PSC 1350 |
| Canon | LBP-3000 | HP | PSC 1410 |
| Canon | LBP-3010 | HP | PSC 1510 |
| Canon | LBP-3018 | HP | PSC 1610 |
| Canon | LBP-3050 | HP | PSC 1650 |
| Canon | LBP-3108 | HP | PSC 2210 |
| Canon | LBP-3200 | HP | PSC 2300 |
| Canon | LBP-3300 | HP | PSC 2310 |
| Canon | LBP-3500 | HP | PSC 2355 |
| Canon | LBP-5000 | HP | PSC 240 |
| Canon | LBP-5050 | HP | PSC 2410 |
| Canon | LBP-5500 | HP | PSC 2510 |
| Canon | LBP-350 | HP | PSC 750 |
| Canon | LBP-430W | HP | PSC 950 |
| Canon | LBP-470 | HP | Visualizec 3700 |
| Canon | LBP-660 | HP | ScanJet 4370 |
| Canon | LBP-720 | HP | ScanJet 4850 |
| Canon | LBP-740 | HP | ScanJet 5590 |
| Canon | LBP-800 | HP | ScanJet 6300C |
| Canon | LBP-810 | Konica | 1600W |
| Canon | LBP-840 | Konica | bizhub 162 |
| Canon | LBP-880 | Konica | bizhub 163 |
| Canon | LBP-910 | Konica | bizhub 210 |
| Canon | LBP-S400SP | Konica | bizhub 211 |
| Canon | PIXMA iP1000 | Konica | bizhub 220 |
| Canon | PIXMA iP1880 | Konica | bizhub 7521 |
| Canon | PIXMA iP3000 | Konica | bizhub 7616 |
| Canon | PIXMA iP4000 | Konica | CF 1501/2001/2001P |
| Canon | PIXMA iP4680 | Konica | CF 2002/3102 |
| Canon | PIXMA iX4000 | Konica | Color PagePro |
| Canon | PIXMA iX5000 | Konica | Di 151/152 |
| Canon | PIXMA MP110 | Konica | Di 183 |
| Canon | PIXMA MP150 | Konica | Di 200/Di 250/Di 251 |
| Canon | PIXMA MP170 | Konica | Di 350/Di 351 |
| Canon | PIXMA MP600 | Konica | Di 2010/2010f |
| Canon | PIXUS 850 | Konica | Di 2510 |
| Canon | S-100SP | Konica | Di 3010 |
| Canon | S-200SP | Konica | Di 3510/3510f |

| Brand | Model | Brand | Model |
|--------------|--------------|--------------|--------------------------|
| Canon | S-300 | Konica | Di 450 |
| Canon | S-330 | Konica | Di 470 |
| Canon | S-400 | Konica | Di 520 |
| Canon | S-400SP | Konica | Di 550 |
| Canon | S-450 | Konica | Di 551 |
| Canon | S-520 | Konica | Di 620 |
| Canon | S-600 | Konica | Di 650 |
| Canon | S-6300 | Konica | Di 750 |
| Canon | S-750 | Konica | Di 850 |
| Canon | iP90v | Konica | Dialta Di250f |
| Canon | iP1600 | Konica | Konica Minolta 7115 |
| Canon | iP1000 | Konica | Konica Minolta 7118 |
| Canon | iP1180 | Konica | Konica Minolta 7022 |
| Canon | iP1200 | Konica | Konica Minolta 7130 |
| Canon | iP1880 | Konica | Konica Minolta 7135 |
| Canon | iP2780 | Konica | Konica Minolta 7216 |
| Canon | iP3000 | Konica | Konica Minolta 7222 |
| Canon | iP3500 | Konica | Konica Minolta 7228 |
| Canon | iP4200 | Konica | Konica Minolta 7235 |
| Canon | iP4500 | Konica | Konica Minolta 7145 |
| Canon | iP4680 | Konica | Konica Minolta 7155 |
| Canon | iR1022 | Konica | Konica Minolta 7165/DP65 |
| Canon | iR1022F | Konica | Konica Minolta 7255 |
| Canon | iX4000 | Konica | Konica Minolta 7272 |
| Canon | Mf-3220 | Konica | Konica Minolta 7075/DP75 |
| Canon | Mf-4010 | Konica | Konica Minolta 7085/DP85 |
| Canon | MF4150 | Konica | Konica Minolta 7516/7616 |
| Canon | MF4350d | Konica | Bizhub 160f |
| Canon | MF5770 | Konica | Bizhub 162 |
| Canon | MFP259 | Konica | Bizhub 210 |
| Canon | MP110 | Konica | Magicolor 2200 |
| Canon | MP145 | Konica | Magicolor 2200N/GN/EN/DP |
| Canon | MP150 | Konica | Magicolor 2300W |
| Canon | MP180 | Konica | Magicolor 2350 |
| Canon | MP450 | Konica | Magicolor 2350EN |
| Canon | MP496 | Konica | Magicolor 2400W |
| Canon | MP520 | Konica | Magicolor 2430DL |
| Canon | MP568 | Konica | Magicolor 2450 |
| Canon | MP780 | Konica | Magicolor 2490MF |
| Canon | MP830 | Konica | Magicolor 2500W |
| Canon | MX308 | Konica | Magicolor 3100DN |
| Canon | MX310 | Konica | Magicolor 3300EN/DN |
| Canon | MX328 | Konica | Magicolor 5430DL |
| Canon | MX357 | Konica | Magicolor 5450 |
| Canon | MX700 | Konica | Magicolor 6100N/GN/EN/DP |
| Canon | S600 | Konica | Magicolor 7300 |
| Dell | 720 | Konica | PagePro 6 |

| Brand | Model | Brand | Model |
|--------------|------------------------|--------------|------------------|
| Dell | 926 | Konica | PagePro 6 ex |
| Dell | 966 | Konica | PagePro 8 |
| Dell | 1100 | Konica | PagePro 8e |
| Dell | V305 | Konica | PagePro 12 |
| Dymo | LabelWriter 400 Turbo | Konica | PagePro 20 |
| Dymo | LabelWriter DUO | Konica | PagePro 300W |
| Dymo | LabelWriter Twin Turbo | Konica | PagePro 1350E |
| Epson | AcuLaser C1000 | Konica | PagePro 1350W |
| Epson | AcuLaser C1100 | Konica | PagePro 1380W |
| Epson | AcuLaser C1900 | Konica | PagePro 4100E/GN |
| Epson | AcuLaser C2000 | Konica | PagePro 9100N |
| Epson | AcuLaser C4000 | Konica | PagePro 1250E |
| Epson | AcuLaser C4100 | Konica | PagePro 1300W |
| Epson | AcuLaser C7000 | Konica | PagePro 9100 |
| Epson | AcuLaser C8500 | Kyocera | FS 1030D |
| Epson | AcuLaser C8600 | Kyocera | FS 2000D |
| Epson | AcuLaser C900 | Kyocera | FS 6020 |
| Epson | DLQ-3500K+ | Kyocera | KM1635 |
| Epson | EPL-1220 | Kyocera | KM180 |
| Epson | EPL-2020 | Lexmark | 4039 |
| Epson | EPL-2180 | Lexmark | 4039 10R |
| Epson | EPL-2500 | Lexmark | 5700 |
| Epson | EPL-5200 | Lexmark | C510 |
| Epson | EPL-5500 | Lexmark | C720 |
| Epson | EPL-5700L | Lexmark | C750 |
| Epson | EPL-5701 | Lexmark | C752 |
| Epson | EPL-5800L | Lexmark | C760 |
| Epson | EPL-5800 | Lexmark | C762 |
| Epson | EPL-5900L | Lexmark | C910 |
| Epson | EPL-5900 | Lexmark | C912 |
| Epson | EPL-6100L | Lexmark | ColorJet 2050 |
| Epson | EPL-6100 | Lexmark | E210 |
| Epson | EPL-6200L | Lexmark | E220 |
| Epson | EPL-6200 | Lexmark | E230 |
| Epson | EPL C8000 | Lexmark | E232 |
| Epson | EPL C8200 | Lexmark | E321 |
| Epson | EPL N1210 | Lexmark | E322 |
| Epson | EPL N1220 | Lexmark | E323n |
| Epson | EPL N1610 | Lexmark | E330 |
| Epson | EPL N2000K | Lexmark | E332n |
| Epson | EPL N2000 | Lexmark | Optra C710 |
| Epson | EPL N2120 | Lexmark | Optra Color 45 |
| Epson | EPL N2500N | Lexmark | Optra E |
| Epson | EPL N2500 | Lexmark | Optra E+ |
| Epson | EPL N4000 | Lexmark | Optra E230 |
| Epson | LQ 100 | Lexmark | Optra E310 |
| Epson | LQ 1000C | Lexmark | Optra E312L |

| Brand | Model | Brand | Model |
|--------------|-----------------------|--------------|---------------|
| Epson | LQ 1070C | Lexmark | Optra K1220 |
| Epson | LQ 1170C | Lexmark | Optra M410 |
| Epson | LQ 1520K | Lexmark | Optra M412 |
| Epson | LQ 1600K3/K3H | Lexmark | Optra N/R+ |
| Epson | LQ 1600K4/K4+ | Lexmark | Optra S1250 |
| Epson | LQ 1600 | Lexmark | Optra S1855 |
| Epson | LQ 1900K2+ | Lexmark | Optra SC1275 |
| Epson | LQ 1900K2 | Lexmark | Optra SC3455 |
| Epson | LQ 2170C | Lexmark | Optra SE-345 |
| Epson | LQ 300 | Lexmark | Optra SE-3455 |
| Epson | LQ 300K+ | Lexmark | Optra T522 |
| Epson | LQ 300K | Lexmark | Optra T614 |
| Epson | LQ 550 | Lexmark | Optra W810 |
| Epson | LQ 570+ | Lexmark | P6210 |
| Epson | LQ 590K | Lexmark | P6250 |
| Epson | LQ 580K | Lexmark | T430 |
| Epson | LQ 630K | Lexmark | T430D |
| Epson | LQ 635K | Lexmark | T430DN |
| Epson | LQ 660K | Lexmark | T522 |
| Epson | LQ 680 | Lexmark | T603 |
| Epson | ME1 | Lexmark | T632N |
| Epson | ME1+ | Lexmark | T634 |
| Epson | ME 33 | Lexmark | W812 |
| Epson | ME 70/200/300 | Lexmark | W820N |
| Epson | ME 320 | Lexmark | X1185 |
| Epson | PM 700C | Lexmark | X1270 |
| Epson | Perfection 2480 Photo | Lexmark | X215 |
| Epson | Stylus C20SX | Lexmark | X2250 |
| Epson | Stylus C41UX/SX | Lexmark | X4270 |
| Epson | Stylus C60 | Lexmark | X4550 |
| Epson | Stylus C65 | Lexmark | X5150 |
| Epson | Stylus Color 1160 | Lexmark | X5250 |
| Epson | Stylus Color 1500 | Lexmark | X5270 |
| Epson | Stylus Color 1520K | Lexmark | X5470 |
| Epson | Stylus Color 3000 | Lexmark | X6170 |
| Epson | Stylus Color 400 | Lexmark | X7170 |
| Epson | Stylus Color 460 | Lexmark | X7350 |
| Epson | Stylus Color 600 | Lexmark | Z11 |
| Epson | Stylus Color 640 | Lexmark | Z13 |
| Epson | Stylus Color 660 | Lexmark | Z25 |
| Epson | Stylus Color 670 | Lexmark | Z33 |
| Epson | Stylus Color 740 | Lexmark | Z35 |
| Epson | Stylus Color 800 | Lexmark | Z43 |
| Epson | Stylus Color 850 | Lexmark | Z45 |
| Epson | Stylus Color 900 | Lexmark | Z51 |
| Epson | Stylus CX3100 | Lexmark | Z53 |
| Epson | Stylus CX5100 | Lexmark | Z615 |

| Brand | Model | Brand | Model |
|--------------|-----------------------|--------------|------------------------|
| Epson | Stylus CXL500 | Lexmark | Z645 |
| Epson | Stylus Photo 1200 | Lexmark | Z810 |
| Epson | Stylus Photo 1270 | Lexmark | Z818 |
| Epson | Stylus Photo 1290 | Microtek | ScanMaker 5800 |
| Epson | Stylus Photo 1390 | Murata | MFX 1930 |
| Epson | Stylus Photo 2480 | OKI | OKI 1800C |
| Epson | Stylus Photo 700 | OKI | OKI 5150F |
| Epson | Stylus Photo 710 | OKI | OKI 5530 |
| Epson | Stylus Photo 720 | OKI | C3100 |
| Epson | Stylus Photo 750 | OKI | C3200 |
| Epson | Stylus Photo EX2 | OKI | C5510 |
| Epson | Stylus Photo EX3 | Plustek | OpticBook 3600 Plus |
| Epson | Stylus Photo R210 | Samsung | CLP 300 |
| Epson | Stylus Photo R230 | Samsung | CLP 315 |
| Epson | Stylus Photo R250 | Samsung | CLP 500 |
| Epson | Stylus Photo R270 | Samsung | MFP-560 |
| Epson | Stylus Photo R310 | Samsung | MJC-5000 |
| Epson | Stylus Photo RX430 | Samsung | MJC-6000 |
| Epson | Stylus Pro 7600 | Samsung | ML-1210 |
| Epson | Stylus Pro 7800 | Samsung | ML-1250 |
| Epson | Stylus Pro XL | Samsung | ML-1430 |
| Epson | Stylus Scan 2000 | Samsung | ML-1440/1450 |
| Epson | Stylus Scan 2500 | Samsung | ML-1510/1710 |
| Epson | TM-88 II | Samsung | ML-1510 |
| Epson | TM-883(III) | Samsung | ML-1520 |
| Epson | TM-U210D | Samsung | ML-1666 |
| Epson | TM-U220 | Samsung | ML-1710 |
| Epson | TM-U220 PB | Samsung | ML-1750 |
| Epson | Stylus C110 | Samsung | ML-2010 |
| Epson | Stylus C63 | Samsung | ML 2150 |
| Epson | Stylus C65 | Samsung | ML 2151N |
| Epson | Stylus C90 | Samsung | ML 2152W |
| Epson | Stylus CX1500 | Samsung | ML 2570 |
| Epson | Stylus CX3500 | Samsung | ML-4500 |
| Epson | Stylus CX3700 | Samsung | ML-4600 |
| Epson | Stylus CX3900 | Samsung | ML-5000A/5100A/P/5200A |
| Epson | Stylus CX4700 | Samsung | ML-6060/N/6050/6100 |
| Epson | Stylus CX5505 | Samsung | ML-6160N/6160S |
| Epson | Stylus CX5800F | Samsung | ML-7050/N/7300/N |
| Epson | Stylus CX6900F | Samsung | ML-808 |
| Epson | Stylus CX7300 | Samsung | ML-912 |
| Epson | Stylus CX9300F | Samsung | SCX-1100 |
| Epson | Stylus DX8450 | Samsung | SCX-1150F |
| Epson | Stylus Office TX510FN | Samsung | SCX-1220 |
| Epson | Stylus Photo 720 | Samsung | SCX 1220R |
| Epson | Stylus Photo 830U | Samsung | SCX-1300 |
| Epson | Stylus Photo 1390 | Samsung | SCX-1350F |

| Brand | Model | Brand | Model |
|--------------|----------------------------|--------------|--------------------------------|
| Epson | Stylus Photo R210 | Samsung | SCX-4111/4106/4116/4216F/4521F |
| Epson | Stylus Photo R310 | Samsung | SCX 4100 |
| Epson | Stylus Photo RX650 | Samsung | SCX 4200 |
| Epson | Stylus RX430 | Samsung | SCX-4321 |
| Epson | Stylus RX510 | Samsung | SCX-4x21 |
| Epson | Stylus Scan 2000 | Samsung | SCX-4X25 |
| Epson | Stylus Scan 2500 | Samsung | SCX-5112 |
| Epson | Stylus TX110 | Samsung | SCX-5115 |
| Epson | Stylus TX220 | Samsung | SCX-5315F/5312F |
| HP | Business Inkjet 1000 | Samsung | SF-3100P |
| HP | Business Inkjet 1200 | Samsung | SF-330 |
| HP | Business Inkjet 2230 | Samsung | SF-331P |
| HP | Business Inkjet 2250/DN | Samsung | SF-430 |
| HP | Business Inkjet 2280 | Samsung | SF-4500/4500C |
| HP | Business Inkjet 2800 | Samsung | SF-555P |
| HP | Business Inkjet 3000 | Samsung | SF-565P |
| HP | Color Inkjet cp 1700 | Samsung | SF-5100P |
| HP | Color Inkjet cp 1700d | Samsung | SF-5800P |
| HP | Color laserjet CP1215 | Samsung | ML-3470D |
| HP | Color laserjet PRO CP5225 | Samsung | SCX-4x16 |
| HP | Color LaserJet 1215 | Samsung | TG Dream Combo M4100 |
| HP | Color LaserJet 1500 | SHARP | AR-158/158F |
| HP | Color LaserJet 1600 | SHARP | AR-163/163N |
| HP | Color LaserJet 2500 | SHARP | AR-201/201N/200 |
| HP | Color LaserJet 2500L | SHARP | AR-206/206N |
| HP | Color LaserJet 2500n | SHARP | AR-208 |
| HP | Color LaserJet 2550 | SHARP | AR-255 |
| HP | Color LaserJet 550L/LN | SHARP | AR-256 |
| HP | Color LaserJet 2600n | SHARP | AR-256L |
| HP | Color LaserJet 2605 | SHARP | AR-2718 |
| HP | Color LaserJet 2700n | SHARP | AR-275 |
| HP | Color LaserJet 3000 | SHARP | AR-2818 |
| HP | Color LaserJet 3500 | SHARP | AR-2820 |
| HP | Color LaserJet 3550 | SHARP | AR-2921 |
| HP | Color LaserJet 3700 | SHARP | AR-3818S |
| HP | Color LaserJet 4550 | SHARP | AR-3020D |
| HP | Color LaserJet 4600 | SHARP | AR-3821D |
| HP | Color LaserJet 4600dn | SHARP | AR-4818S |
| HP | Color LaserJet 4600dtn | SHARP | AR-316 |
| HP | Color LaserJet 4650 | SHARP | AR-330/331 |
| HP | Color LaserJet 5500 | SHARP | AR-350 |
| HP | Color LaserJet 5500dn | SHARP | AR-450 |
| HP | Color LaserJet 5500dtn/dfn | SHARP | AR-M160 |
| HP | Color LaserJet 5550 | SHARP | AR-M205 |
| HP | Color LaserJet 8500 | SHARP | AR M207 |
| HP | Color LaserJet 8550 | SHARP | AR M209 |
| HP | Color LaserJet 9500hdn | SHARP | AR-M236 |

| Brand | Model | Brand | Model |
|--------------|-----------------------|--------------|-------------------------|
| HP | Color LaserJet 9500n | SHARP | AR-M276 |
| HP | Color LaserJet CM1015 | SHARP | MX-M210D |
| HP | Designjet 3325 | SHARP | AM 400 |
| HP | Designjet 3420 | FUJI Xerox | DL3800 |
| HP | Designjet 350C | FUJI Xerox | DL-6400 Pro |
| HP | Designjet 3538 | FUJI Xerox | DL700 |
| HP | Designjet 3558 | FUJI Xerox | Document Centre 156/186 |
| HP | Designjet 3658 | FUJI Xerox | Document Centre 235/236 |
| HP | Designjet 3668 | FUJI Xerox | Document Centre 285/286 |
| HP | Designjet 3748 | FUJI Xerox | Document Centre 405 |
| HP | Designjet 5000 | FUJI Xerox | Document Centre 605/606 |
| HP | Designjet 600C | FUJI Xerox | Document Centre 705/706 |
| HP | DeskJet 1000 | FUJI Xerox | Document Centre 2000 |
| HP | DeskJet 1558 | FUJI Xerox | DocuPrint 181 |
| HP | DeskJet 1566 | FUJI Xerox | DocuPrint 202 |
| HP | DeskJet 3535 | FUJI Xerox | DocuPrint 203A |
| HP | DeskJet 3650 | FUJI Xerox | DocuPrint 2050 |
| HP | DeskJet 3745 | FUJI Xerox | DocuPrint 210/211 |
| HP | DeskJet 3845 | FUJI Xerox | DocuPrint 255/305 |
| HP | DeskJet 5540 | FUJI Xerox | DocuPrint C1618 |
| HP | DeskJet 5850 | FUJI Xerox | DocuPrint C2428 |
| HP | DeskJet 1120C | FUJI Xerox | DocuPrint C621 |
| HP | DeskJet 1125C | FUJI Xerox | DocuPrint C831 |
| HP | DeskJet 1180C | FUJI Xerox | DocuPrint N4525 |
| HP | DeskJet 1220C | FUJI Xerox | Jet Wind 500C |
| HP | DeskJet 125C | FUJI Xerox | Phaser 3116 |
| HP | DeskJet 1280 | FUJI Xerox | Phaser 3117/3119 |
| HP | DeskJet 2050 | FUJI Xerox | Phaser 3121 |
| HP | DeskJet 3325 | FUJI Xerox | Phaser 3130 |
| HP | DeskJet 3420 | FUJI Xerox | Phaser 3428 |
| HP | DeskJet 3425 | FUJI Xerox | Phaser 5400 |
| HP | DeskJet 3538/355 | FUJI Xerox | Phaser 5500 |
| HP | DeskJet 3658 | FUJI Xerox | Phaser 7700 |
| HP | DeskJet 3668 | FUJI Xerox | Phaser 3115 |
| HP | DeskJet 3748 | FUJI Xerox | Phaser 3130 |
| HP | DeskJet 3820 | FUJI Xerox | WorkCentre 3119 |
| HP | DeskJet 3845 | FUJI Xerox | WorkCentre 415 |
| HP | DeskJet 400/420 | FUJI Xerox | WorkCentre 518II |
| HP | DeskJet 420C | FUJI Xerox | WorkCentre 520CP |
| HP | DeskJet 430C | FUJI Xerox | WorkCentre C400/C320 |
| HP | DeskJet 450 | FUJI Xerox | WorkCentre Pro 415/420 |
| HP | DeskJet 500/550C | FUJI Xerox | WorkCentre Pro 580 |
| HP | DeskJet 5168 | FUJI Xerox | WorkCentre PE220 |
| HP | DeskJet 5550 | Panasonic | DP 1510P |
| HP | DeskJet 560C | Panasonic | DP 1810F |
| HP | DeskJet 5650 | Panasonic | KX-P1121/ P1131 |
| HP | DeskJet 5652 | Panasonic | KX-P1624 |

| Brand | Model | Brand | Model |
|-------|---------------------|-----------|----------------------|
| HP | DeskJet 6122 | Panasonic | KX-FLB 853CN |
| HP | DeskJet 640C | Panasonic | KX-P2023 |
| HP | DeskJet 6540 | Panasonic | KX-P7100 |
| HP | DeskJet 656C | Panasonic | KX-mb778cn |
| HP | DeskJet 670C | Toshiba | E-studio 169/209/259 |
| HP | DeskJet 692C | Toshiba | E-studio 166/167 |
| HP | DeskJet 700C | Toshiba | E-studio 206 |
| HP | DeskJet 720C | Toshiba | E-studio 207 |
| HP | DeskJet 722C | Lenovo | 2100 |
| HP | DeskJet 810C | Lenovo | 2200 |
| HP | DeskJet 845C | Lenovo | 2210/2210P |
| HP | DeskJet 890C | Lenovo | 2312 |
| HP | DeskJet 920C | Lenovo | 8100 |
| HP | DeskJet 9300 | Lenovo | C8000 |
| HP | DeskJet 940C | Lenovo | C8600DN |
| HP | DeskJet 948C | Lenovo | C9500N |
| HP | DeskJet 960C | Lenovo | LJ2000 |
| HP | DeskJet 9650 | Lenovo | LJ2050N |
| HP | DeskJet 9680 | Lenovo | LJ2110P |
| HP | DeskJet 970C XI | Lenovo | LJ2312 |
| HP | DeskJet 9800 | Lenovo | LJ2500,2500W |
| HP | DeskJet 990C XI | Lenovo | LJ2800,305D |
| HP | DeskJet 995C | Lenovo | LJ3000W,3000 |
| HP | DeskJet D1468 | Lenovo | LJ3220 |
| HP | DeskJet D2468 | Lenovo | LJ4000N |
| HP | DeskJet D5568 | Lenovo | LJ5500 |
| HP | DeskJet F388 | Lenovo | LJ5600 |
| HP | DeskJet K209 | Lenovo | LJ5700 |
| HP | LaserJet 1000 | Lenovo | LJ6000 |
| HP | LaserJet 1005 | Lenovo | LJ6012MFP |
| HP | LaserJet 1010 | Lenovo | LJ7500,7500E |
| HP | LaserJet 1012 | Lenovo | LJ7600N |
| HP | LaserJet 1015 | Lenovo | M-3120 |
| HP | LaserJet 1018 | Lenovo | M3200 |
| HP | LaserJet 1020 | Lenovo | M6220 |
| HP | LaserJet 1020plus | Lenovo | M7000 |
| HP | LaserJet 1022 | Lenovo | M7110 |
| HP | LaserJet 1022N | Lenovo | M7120 |
| HP | LaserJet 1100 | Lenovo | M7200 |
| HP | LaserJet 1100A | Lenovo | M7220D |
| HP | LaserJet M1005(MFP) | Lenovo | M7250 |
| HP | LaserJet M1120MFP | Lenovo | M8210 |
| HP | LaserJet M1319f | Lenovo | M9215 |
| HP | LaserJet 1150 | Lenovo | M9218 |
| HP | LaserJet 1160 | Lenovo | 3110 |
| HP | LaserJet 1200 | NEC | P3200 |
| HP | LaserJet 1300 | NEC | P5300 |

| Brand | Model | Brand | Model |
|--------------|---------------------|--------------|------------------------|
| HP | LaserJet 1300n | NEC | P6300 |
| HP | LaserJet 1320 | NEC | P7300 |
| HP | LaserJet 1320n | IBM | 4039 model 16L |
| HP | LaserJet 2000 | IBM | 5577-KC2 |
| HP | LaserJet 2015D | IBM | Inforprint 20 |
| HP | LaserJet 2200 | IBM | Inforprint 32 |
| HP | LaserJet 2105 | Founder | 1200C |
| HP | LaserJet 2105D | Founder | 2000C |
| HP | LaserJet 2200 | Founder | A280P |
| HP | LaserJet 2200D | Founder | A5000 |
| HP | LaserJet 2300 | Founder | A5100 |
| HP | LaserJet 2300D | Founder | A5100N |
| HP | LaserJet 2410 | Founder | A5100P |
| HP | LaserJet 2420 | Founder | A6000/N |
| HP | LaserJet 2550L | Founder | A6100 |
| HP | LaserJet 3005 | Founder | A6100N |
| HP | LaserJet 3015 | Founder | A6100U |
| HP | LaserJet 3020 | Founder | A6300 |
| HP | LaserJet 3030 | Founder | C8000 |
| HP | LaserJet 3050 | Founder | C8000E |
| HP | LaserJet 3050Z | Founder | C8200 |
| HP | LaserJet 3052 | Founder | C8300N |
| HP | LaserJet 3055 | Founder | C9000 |
| HP | LaserJet 3100 | Founder | A220 |
| HP | LaserJet 3200 | Founder | A230 |
| HP | LaserJet 3300 | Founder | A300 |
| HP | LaserJet 3300mfp | Founder | A400 |
| HP | LaserJet 3330 | Star | AR-3200/3200+/3200 II+ |
| HP | LaserJet 3330mfp | Star | AR-970 |
| HP | LaserJet 3380 | Star | DDS45 |
| HP | LaserJet 3390 | Star | DDS62 |
| HP | LaserJet 3500 | Star | DDS70 |
| HP | LaserJet 4000 | Star | DDS92 |
| HP | LaserJet P4010/4510 | Star | LQ-1900K pro |
| HP | LaserJet 4050 | Star | NX-2400 |
| HP | LaserJet 4050N | Star | NX-2420 |
| HP | LaserJet 4100/4100n | Star | NX-500 |
| HP | LaserJet 4100mfp | Star | Superlaser 3022k |
| HP | LaserJet 4200/4200n | Star | Superlaser 3022n |
| HP | LaserJet 4200tn/dtn | Star | Superlaser 3040n |
| HP | LaserJet 4200 | Star | Superlaser 4010 |
| HP | LaserJet 4250 | Star | 680H |
| HP | LaserJet 4300n | Star | 180,260 |
| HP | LaserJet 4300tn/dtn | Star | 80FF,80FF+,120FF |
| HP | LaserJet 4300 | Star | NX500 |
| HP | LaserJet 4550/8550 | RICOH | Aficio 1013 |
| HP | LaserJet 4L/4P/4V | RICOH | Aficio 1015,1018 |

| Brand | Model | Brand | Model |
|--------------|-----------------------|--------------|--------------------|
| HP | LaserJet 5000 | RICOH | Aficio 551 |
| HP | LaserJet 5000LE | RICOH | Aficio 1035,1045 |
| HP | LaserJet 5100fn/tn | RICOH | Aficio 1022,1037 |
| HP | LaserJet 5100le/se | RICOH | Aficio 1115p |
| HP | LaserJet 5200 | RICOH | Aficio FX150SF |
| HP | LaserJet 5200dtn/tn | RICOH | Aficio 1610LD |
| HP | LaserJet 5200L/Lx | RICOH | Aficio AP600 |
| HP | LaserJet 5550 | RICOH | MP1810LD |
| HP | LaserJet 5L | Other | BEIYANG BTP-2002CP |
| HP | LaserJet 6L PRO | Other | BEIYANG BTP-R580 |
| HP | LaserJet 6P/6L | Other | BEIYANG M280 |
| HP | LaserJet 8000 | Other | JIABO GP-80250IE |
| HP | LaserJet 8150 | Other | BOSHI BS-180KC |
| HP | LaserJet 8150n/dn | Other | GONGDAPOS58LP |
| HP | LaserJet 9000 | Other | Zonerich AB-88K |
| HP | LaserJet 9000mfp | Other | Zonerich AB-80K |
| HP | LaserJet 9000n/9000dn | Other | JICHENG 5890 |
| HP | LaserJet 9065mfp | | |